



# CONSTANT LOAD WEIGHT

For Types 00 & 000  
Part No. CLW-00



← Constant Load Weight

## Constant Load Weight Installation:

1. Remove the dust cap located at the top of the dial indicator
2. Replace with Constant Load Weight (hand tight)

*Note: Do not over tighten or damage can occur. Rex Gauge Durometer Models 1500, H-1000, and 2100 are not recommended for use with constant load weights.*

If you have any questions or comments regarding the use of this or any Rex product, please call 847-465-9009.

For more information visit our Web Site at [durometer.com](http://durometer.com)



## REX GAUGE COMPANY LLC

**847/465-9009**

**800/927-3982**